


Recirculating KIT

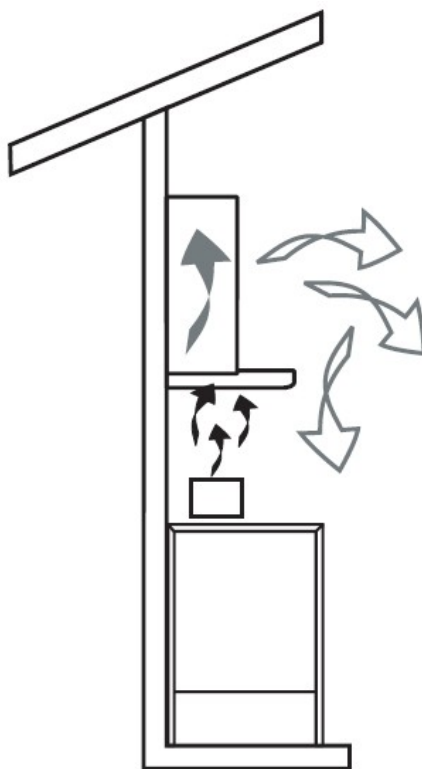

Applicable models:

- DEKOR GLASS 30**
- DEKOR GLASS 36**
- DKW001MX 30**
- DKW001MX 36**
- CHN001MX 30**
- CHN001MX 36**


READ AND SAVE THESE INSTRUCTIONS
LEA Y GUARDE ESTAS INSTRUCCIONES

WARNING:

- Read and Save These Instructions.
- Approved for Residential Appliances only.
- PLEASE READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING.
- INSTALLER: Please leave these Instructions with this unit for the owner.
- OWNER: Please retain these instructions for future reference.
- Turn off power circuit at service panel and lock out panel before installing this kit to the appliance.
- Installation must comply with all local codes.


PACKAGING CONTENTS

- Air deflector
- Charcoal Filter(s) (Dekor Glass, 1 Filter. CHN001MX & DKW001MX, 3 Filters.)
- 4 Assembly screws
- Spring(s) (Dekor Glass, 4 Springs. CHN001MX & DKW001MX, 12 Springs)

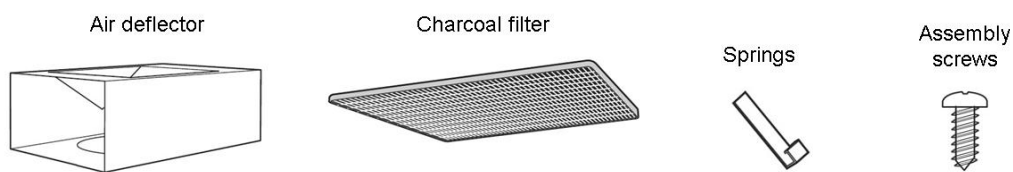


INSTALLATION INSTRUCTIONS


- 1) After the duct cover bracket has been installed on the wall (Refer to Installation Instructions in the Hood Manual), assemble the air deflector to the duct cover bracket with 4 assembly screws, as is shown in the following image.

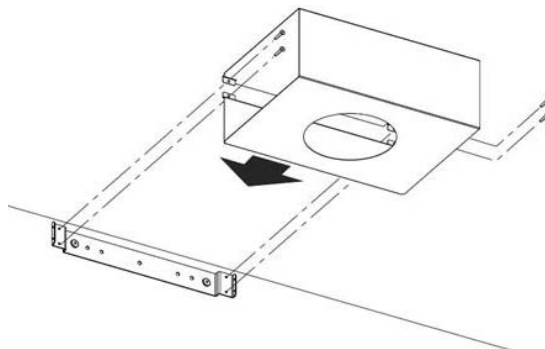

- 2) Measure from the bottom of the air deflector to the bottom of the hood outlet as shown in the following picture. Cut the ductwork at the measured dimension.

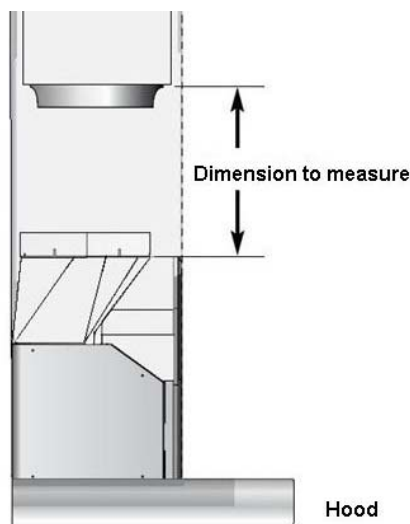


- 3) Uninstall the air deflector removing the 4 assembly screws.
- 4) Slip the duct onto the bottom of the deflector.
- 5) Place the assembled deflector and duct work over the exhaust outlet from the hood.
- 6) Assemble the air deflector to the duct cover bracket, with the 4 assembly screws provided.
- 7) Use duct tape to seal the deflector and the exhaust outlet from the hood, as is shown in the following image. The duct tape should be approved for this application.

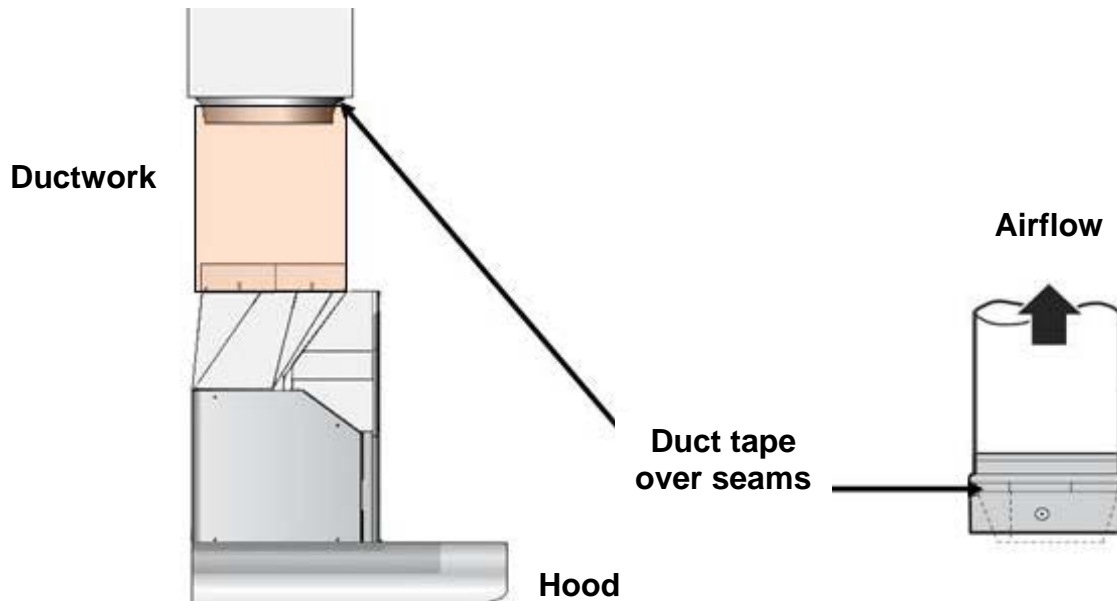

CHARCOAL FILTER INSTALLATION

- Position the charcoal filter over the grease filter and insert the 4 springs (to prevent movement).
- Reinstall the grease filter onto the bottom of the hood.

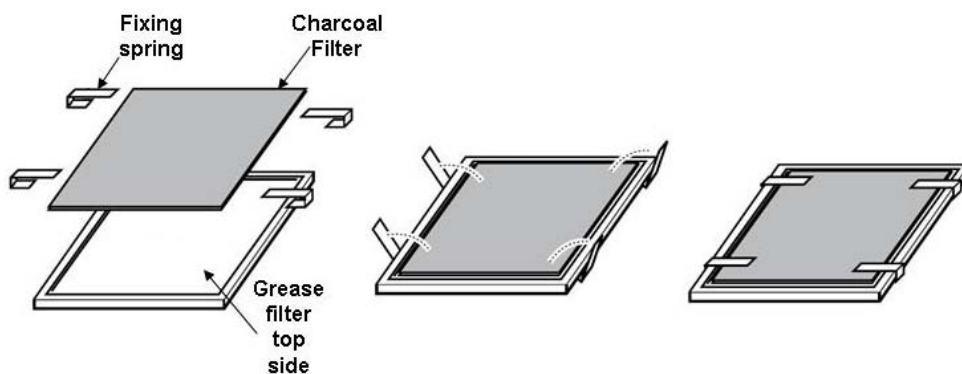

Note: After 120 functional hours the charcoal filter must be replaced.

PRECAUCIÓN:

- Lea y guarde estas instrucciones.
- Aprobado para electrodoméstico residencial únicamente.
- Por favor lea completamente estas instrucciones antes de proceder.
- Instalador: Por favor deje estas instrucciones al propietario.
- Propietario: Por favor mantenga estas instrucciones para futuras referencias.
- Desconecte esta unidad del tablero de control eléctrico y asegure el panel de control antes de instalar este accesorio a la campana.
- La instalación debe cumplir con todos los estatutos locales.


CONTENIDO EN EMPAQUE

- Deflector de aire
- Filtro (s) de carbon (Dekor Glass, 1 Filtro. CHN001MX & DKW001MX, 3 Filtros.)
- 4 Tornillos de ensamble
- Resorte (Dekor Glass, 4 Resortes. CHN001MX & DKW001MX, 12 Resortes)




INSTRUCCIONES PARA INSTALACIÓN


- 1) Después de que el soporte para cubre conductos ha sido instalado en la pared (Haga referencia al manual de instalación de la campana), ensamble el deflector de aire en el soporte de cubre conductos, con 4 tornillos de ensamble, tal y como se muestra en la siguiente figura.

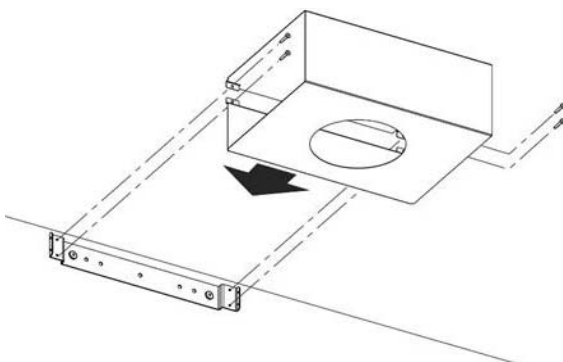

- 2) Mida desde la parte inferior del deflector de aire a la parte inferior del escape en la campana. Corte el conducto a la dimensión medida, como se muestra en la siguiente figura.

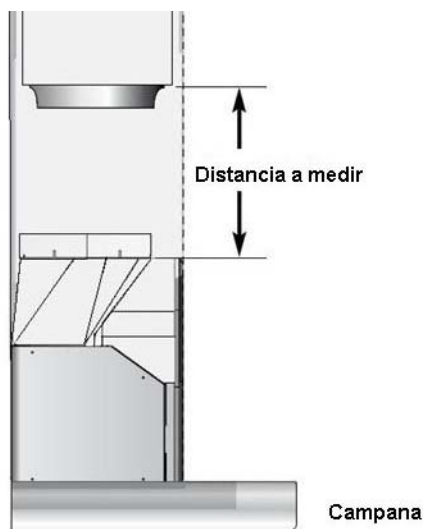


- 3) Desinstale el deflector de aire removiendo los 4 tornillos de ensamble.
- 4) Deslice el conducto en la parte inferior del deflector.
- 5) Posicione el ensamble del deflector de aire y conducto sobre el escape de aire en la campana.
- 6) Ensamble el deflector de aire en el soporte de cubre conductos utilizando los 4 tornillos de ensamble.
- 7) Utilice cinta especial para sellar las uniones del conducto al deflector y al escape de la campana, como se muestra en la siguiente figura. La cinta para sellar conductos debe ser aprobada para esta aplicación.

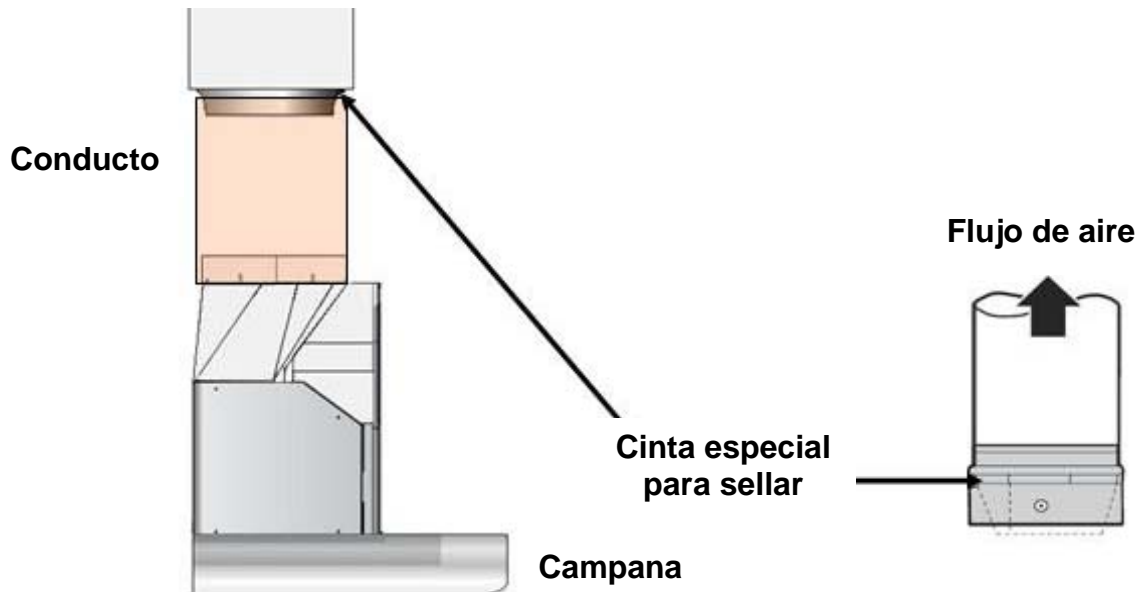

INSTALACIÓN DEL FILTRO DE CARBÓN

- Posicione el filtro de carbón sobre el filtro de grasa, e inserte las 4 abrazaderas (para sujetarlo).
- Reinstale el filtro de grasa en la campana.

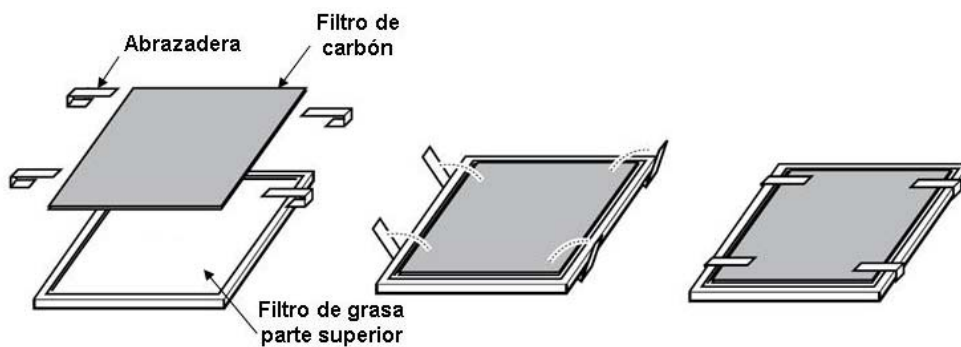

Nota: Después de 120 horas funcionales el filtro de carbón debe ser cambiado.